disadvantages of ordinary elastic straps: loss of elasticity with time and excessive stretching in case of a fall.

Ergonomics

- The X-Pad back pads keep the harness shape, enabling the user to slip the harness into position easily.
- · Automatic buckles enable quick and easy fastening.
- Sliders on the straps allow the user to adjust the harness easily and secure loose straps in position.
- . The HT Electra belt turns inside the harness to allow for outstanding freedom of rotation.





HT Electra

Harness designed for working on power posts. The HT Electra belt rotates inside the harness to allow for freedom of rotation when working on electrical cables from the post.

Complies with Standard EN 358 and EN 361

- . Soft, permeable X-Pad back pad providing structure and style
- 1 attachment point dorsal, sternal
- · 2 attachment point lateral
- · Automatic buckles
- Sliders for strap adjustment. Cannot be removed for security reasons
- Fall indicator on each attachment point
- High-comfort, mountaineering design leg straps (adjustable slider)
 Option: Elastrac units for increased comfort and mobility

HT Electra	S	M	XL
Auto. buckles / Xpad	065272	065282	065292
Auto. buckles / Elastrac™ / Xpad	065912	065922	065932



HT Windmill

Harness for working on windmill generators and electrical pylons. Complies with Standards EN 358, EN 361.

- · Fall prevention device fastening point, forged dorsal and stemal "D" ring.
- . Two forged "D" ring lateral support fastening points.
- · 4 adjustment points
- · Fast buckle prong leg strap adjustment
- · Large capacity tool holders
- · Padded belt and shoulder straps.

HT Windmill	S	M	XL
	050882	050892	050902



HT Greentool

Arborist harness for tree surgeons, equipped with an ergonomic work seat. Conforme aux normes EN 358, EN 361 et EN 813.

Complies with Standard EN 358, EN 361 and EN 813

- . Soft, permeable X-Pad back pad providing structure and style
- 1 attachment point dorsal, sternal, umbilical
- · 2 attachment point lateral
- Automatic buckles
- Sliders for strap adjustment. Cannot be removed for security reasons
- · Fall indicator on each attachment point
- · High-comfort, mountaineering design leg straps (adjustable slider)

Option : Elastrac™ units for increased comfort and mobility

HT Greentool	S	M	XL
Auto. buckles / Xpad	066002	066012	066022
Auto. buckles / Elastrac™ / Xpad	066032	066042	066052

Sizes table, see page 22

Work seat

- Wide and ergonomic.
- · For working in a seated position for a long period of time
- Rigid sides to avoid thigh compression
- Three tools holders.

Positionned on back of HT Secours, HT Promast and HT Transport

